

Product Care:

General Product Care:

- *Fabric should always be handled in a clean area with clean hands and equipment.
- *Be sure fabric is clean and dry before packing.
- *Machine washing and/or drying is not recommended for all fabrics or construction. Contact Moss with any questions.
- *Roll fabric for storage. Fold inside out or face in along seams. Do not fold applied or silk-screened graphics. Pack in bag provided.
- *Fabric may be ironed, on or off the frame. Use Permanent Press setting and non-waxed, non-inked paper between iron and fabric. Keep iron in constant motion.
- *Always pack silk-screened and vinyl graphics with wax-free, ink-free paper or fabric shield to prevent its sticking to another surface.
- *The aluminum frame in this product is susceptible to damage if improperly handled, shipped or stored. Use caution when handling and packing to prevent bending and/or crushing the tube.
- *Pack in original shipping bags. Pack bags in corrugated cardboard box for shipping. Store product in a cool dry area (40-80F).

Emergency Stain Treatment:

1. Prompt treatment of any stain is essential to successful treatment.
2. Identify the stain before you treat it. The guide below will assist you with treatment.
3. Use extreme care treating stains to avoid spreading the stain or creating more damage. Too much moisture can cause water stains or spread stain.
4. Treat the stain with fabric off the frame, if at all possible. Mark stained area with a box or tag using masking tape before removing for cleaning. This makes it easier to find the stain when the fabric comes off the frame. Stain removal will be more effective if you apply treatments from the side away from the stain (usually the inside face of the product). This is not possible with coated fabric and fabric constructions that have a liner (two layers of fabric). Stains on either of these must be treated from the stain side.
5. **TREATMENT:**
 - *Lift scrape or blot as much of the staining material off as possible. (Blot with white cloth provided or similar. Avoid paper products)
 - *Work from the outside edges toward the center of the stain.
 - *Masking tape can be an effective lifting device for drier materials like loose dirt, pencil or ink.
 - *For stains not responsive to water, follow the chart below and manufacturers instructions or call Moss Inc. for assistance.
 - *Most natural stains may be treated with distilled water. Apply water to the back of the stain, and force water through fabric by pushing on the back while stretching the fabric.
 - Or adding water while blotting, using care to keep the wet area as small as possible. Repeat procedure until water is running clear.
 - *Rinse cleaner from fabric using distilled water, blotting from the outside of the stain towards center and dry thoroughly to avoid spreading the stain.

STAIN

Blood
Loose Dirt
Fingernail Polish
Ink
Lipstick
Oil, Grease
Pencil
Food/Drink

Best Cleaner

Shout
Stiff Brush
Denatured Alcohol
Tape/Denatured Alcohol
Shout
K2r
Tape/Denatured Alcohol
Shout

Alternative Solution

AMODEX, 3% Hydrogen Peroxide
Shout, Pre-Spot
ACETONE
AMODEX
AMODEX
Corn Starch & Shout
AMODEX, Pre-spot
Contact Moss




NOTE: This information is provided to assist you with the care and maintenance of you Moss Product. No expressed or implied warranty is intended. Please contact Moss for details or assistance.



Common Troubles

- Fabric Cover Not Fit** - Assure all 4 corners of cover are positioned over frame corners before starting to zip cover closed.
- Hard to adjust cover** - Cover position on frame is easily adjusted when cover is NOT ZIPPED. It is easiest to adjust cover by pulling on un-zipped sides of fabric.
- Frame miss-shaped** - Make sure connectors are very tight. Frame warp can be easily corrected by laying structure flat face down on the floor and lifting upright from both sides.
- Wrinkles in cover** - Use a hand steamer to remove small wrinkles. Adjust cover position for large wrinkles.

Oval, HC, & Arch podium

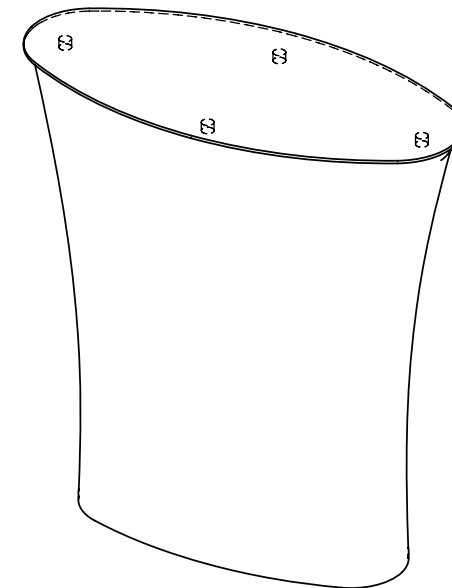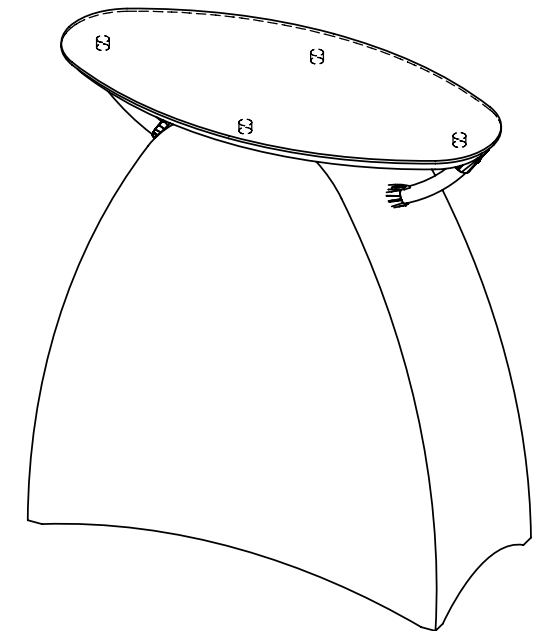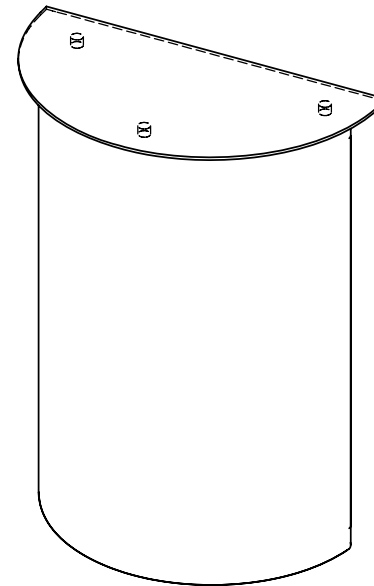

Assembly Instructions:

See Inside
10/28/08

General Instructions:


- *Read and follow all instructions.
- *Save instructions.
- *Wipe down all tubing, clean work area and lay out plastic sheeting.
- *Repack fabric carefully and neatly in the original fabric bag provided.
- *Repeat packing instructions for frame.

Workmanship Guarantee:


Moss Inc. Fully guarantees all exhibits against defects in workmanship. If our products receive proper care, but fail due to a defect in manufacturing, the exhibit will be repaired or replaced at our discretion. Damage to exhibit products caused by accidents, improper care or negligence, where Moss Inc. is not at fault (including sun degradation and wear and tear) repairs will be performed for a reasonable fee.

WARNING: Hanging system and structure are designed for: (1) indoor use only and (2) to hold the weight of the structure and fabric cover only. No other loads should be applied to this display system.



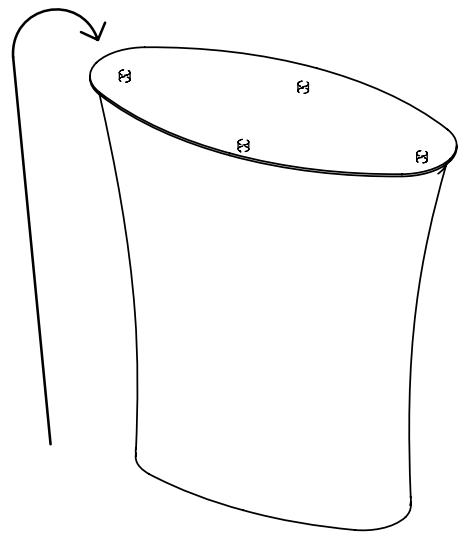

Quick Lock Connector Detail
To clamp & adjust, simply tighten or loosen on the clamp to achieve desired strength.
Connectors are attached to Spacers!

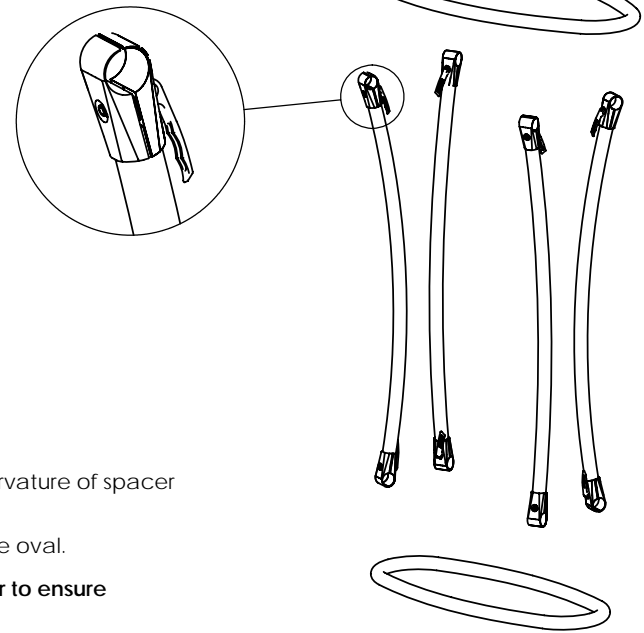

Set Up Instructions for a the Oval Podium:


- (1) Locate all parts shown in diagram.
- (2) Connect 4 curved spacers to small oval as shown. Orient curvature of spacer towards the inside of the oval.
- (3) Secure large oval in same fashion.
- (4) Place Acrylic top with knobs on the bottom inside of the large oval.

NOTE:
All quick Lock Connectors are riveted to each curved spacer to ensure proper placement.


Cover Placement: Before step (4) If applicable.

- (1) Pull cover over frame bottom & bungee along top edge. Bungee is held in place by each peg on the bottom of the acrylic top.

NOTE: Be careful when adjusting cover to not tear the fabric.

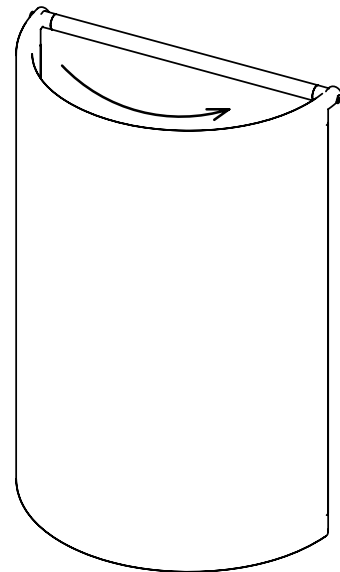

Quick Lock Connector Detail
To clamp & adjust, simply tighten or loosen on the clamp to achieve desired strength.
Connectors are attached to Spacers!


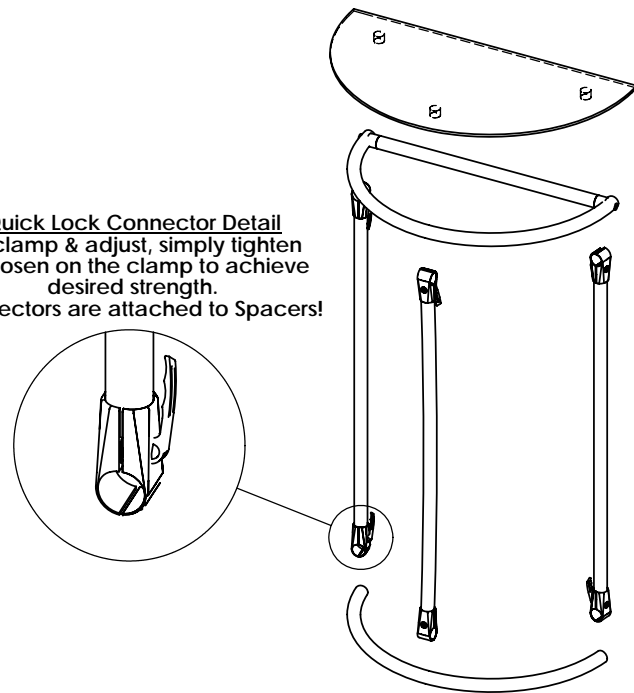


Set Up Instructions for a the Horizontal Curve Podium:


- (1) Locate all parts shown in diagram.
- (2) Secure (2) straight spacers on each end of structure.
NOTE: Connectors on top are placed inside and up against the cross bar. Orient curve of each spacer towards the inside of podium.
- (3) Secure curved spacer using quick lock connectors provided as shown in the middle of top & bottom curved bars..
- (4) Pull cover over frame bottom & zip closed along top edge of frame.
- (4) Place acrylic shelf over top bars as indicated. **NOTE:** Knobs on bottom go inside assembled top bars.

NOTE:
All quick Lock Connectors are riveted to each spacer to ensure proper placement.


Cover Detail

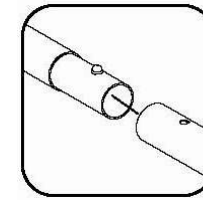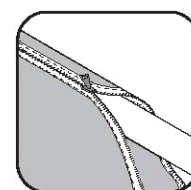

Snap Pin Detail

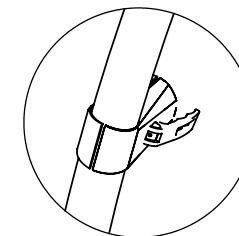

Quick Lock Connector Detail
To clamp & adjust, simply tighten or loosen on the clamp to achieve desired strength.
Connectors are attached to Spacers!

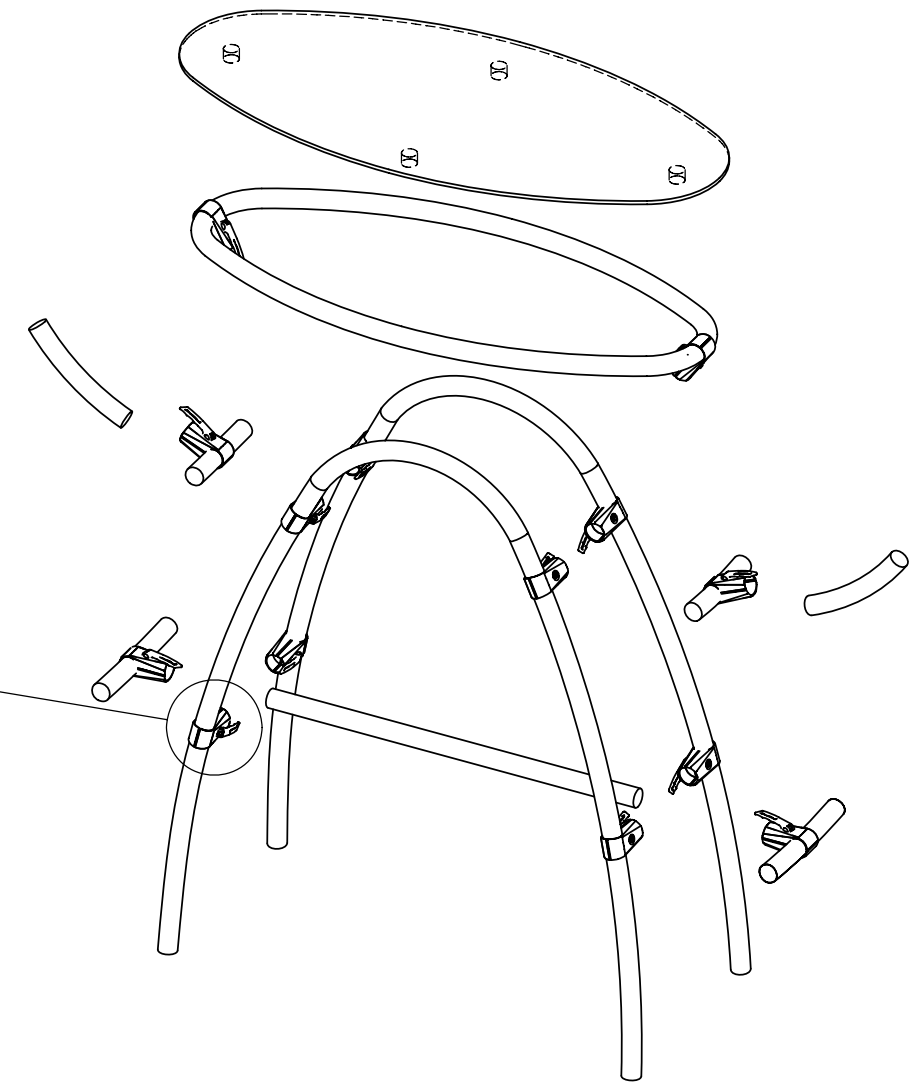

Set Up Instructions for a the Arch Podium:

- (1) Locate all parts shown in diagram.
- (2) Snap fit both shock corded base parts to create arched legs.
Refer to "Snap Pin Detail"
- (3) Build base using spacers shown.
- (4) Secure Oval to base using curved spacer as supports shown.

NOTE:
All quick Lock Connectors are riveted to each bar as shown to ensure proper placement.

Cover Placement: Before step (4) If applicable.

- (1) Pull cover over frame top & bungee along bottom. Bungee is held in place by each leg.
NOTE: Be careful when adjusting cover to not tear the fabric.
- (2) **OPTIONAL** zipper along the back of cover for access to the inside.