


**Step 1.** Screw standoffs into top.

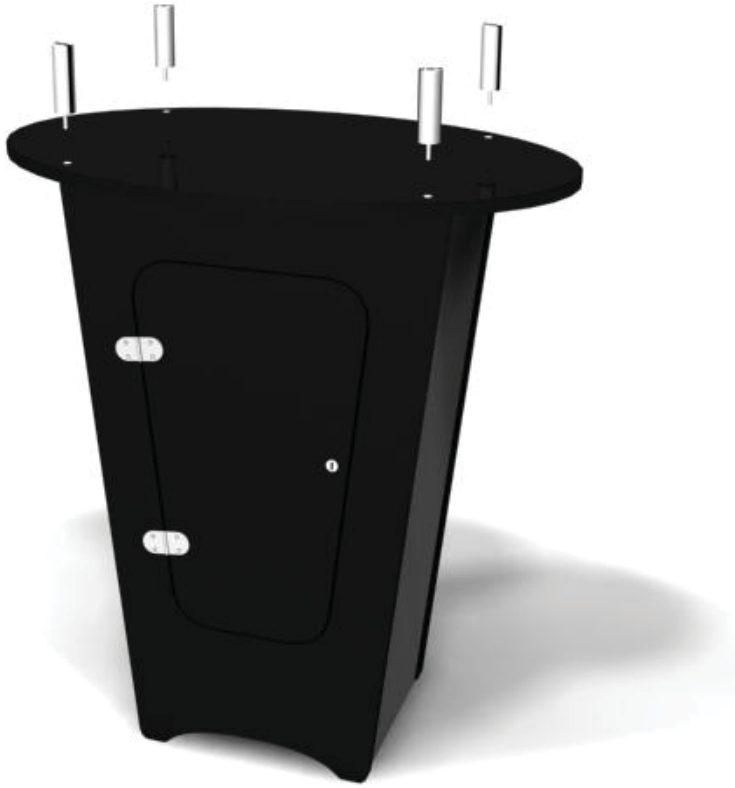

**Step 2.** Slide side infills into standoff slots.



**Step 3.** Attach top with standoff caps.

