



Step 1. Attach extrusions to base using four hex bolts.

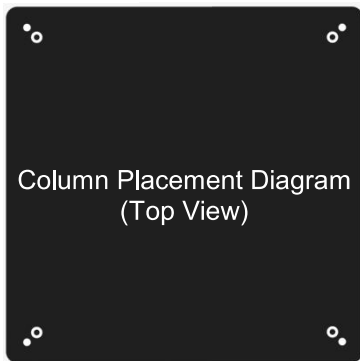

Door Opening



Step 2. Attach support column to base using two **short** thumb knobs; install gusset caps.

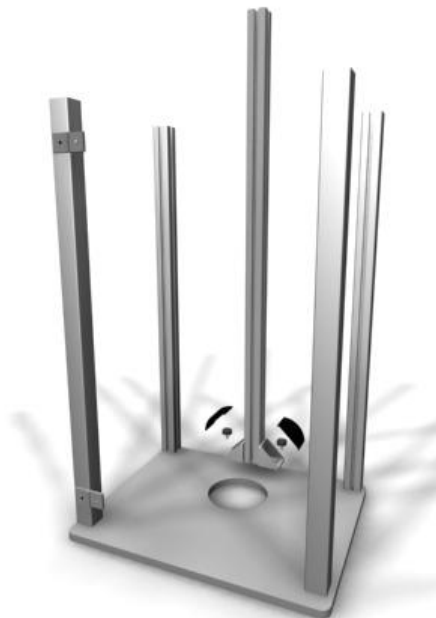

Step 3. Slide in sintra side panels.



Step 4. Attach counter top to extrusions using four hex bolts



Step 5. Attach door to hinges.



Step 7. Attach plex wings; tighten thumb knobs.



Step 6. Attach upper column; tighten thumb knobs.

