

# Included In Your Kit




Tools, Components,  
& Connectors


ALLEN KEY SET x1




ES50 x25

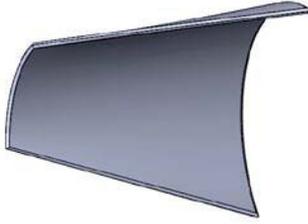

C-WALL-02-A-G x1

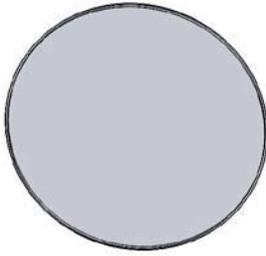


C-WALL-02-B-G x1

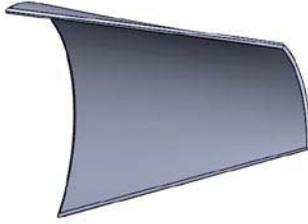

C-WALL-02-C-G x1

# Included In Your Kit

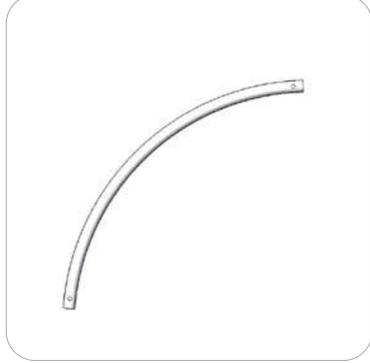


C-WALL-02-A-T1 x1




C-WALL-02-A-T2 x1




C-WALL-02-A-T3 x1

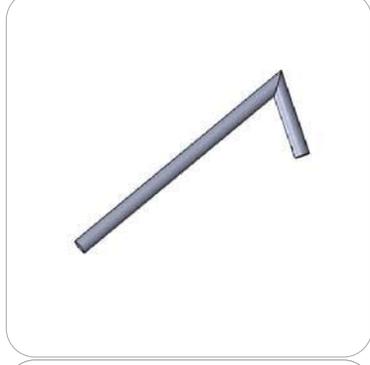


C-WALL-02-A-T4 x1

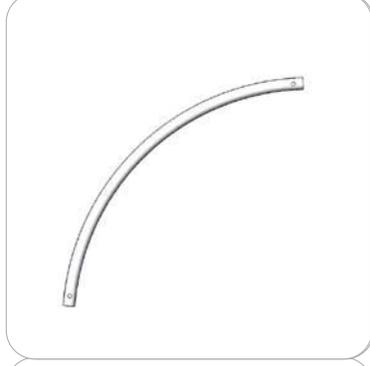

C-WALL-02-A-T5 x1

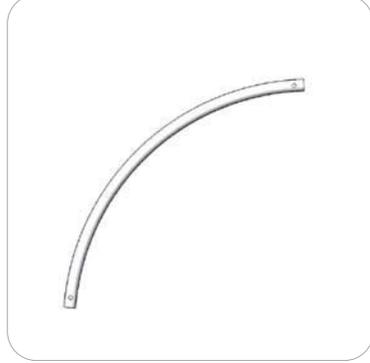

C-WALL-02-A-T6 x1

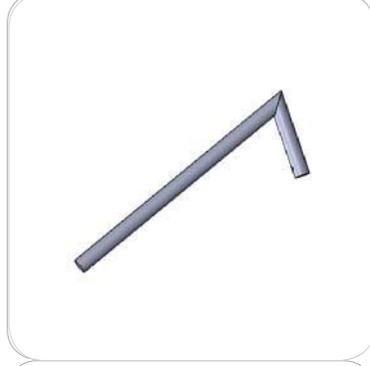


C-WALL-02-A-T7 x1



C-WALL-02-A-T8 x1




C-WALL-02-A-T9 x1

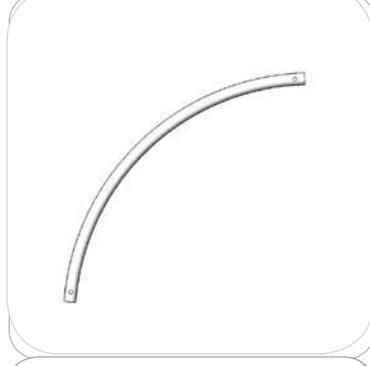

C-WALL-02-B-T1 x1



C-WALL-02-B-T2 x1

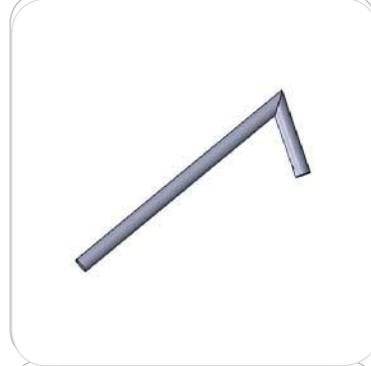


C-WALL-02-B-T3 x1



C-WALL-02-B-T4 x1



C-WALL-02-B-T5 x1

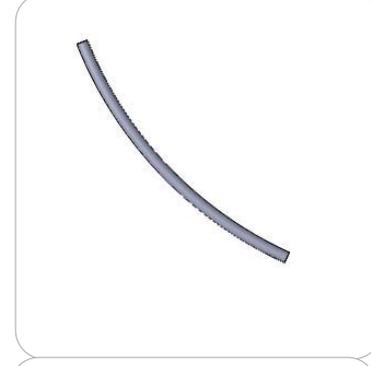

C-WALL-02-B-T6 x1

Tubes

# Included In Your Kit



C-WALL-02-B-T7 x1



C-WALL-02-B-T8 x1



C-WALL-02-B-T9 x1



C-WALL-02-C-T1 x1



C-WALL-02-C-T2 x1



C-WALL-02-C-T3 x1



C-WALL-02-C-T4 x4




C-WALL-02-C-T5 x4

Tubes


# Exploded View

C-WALL-02

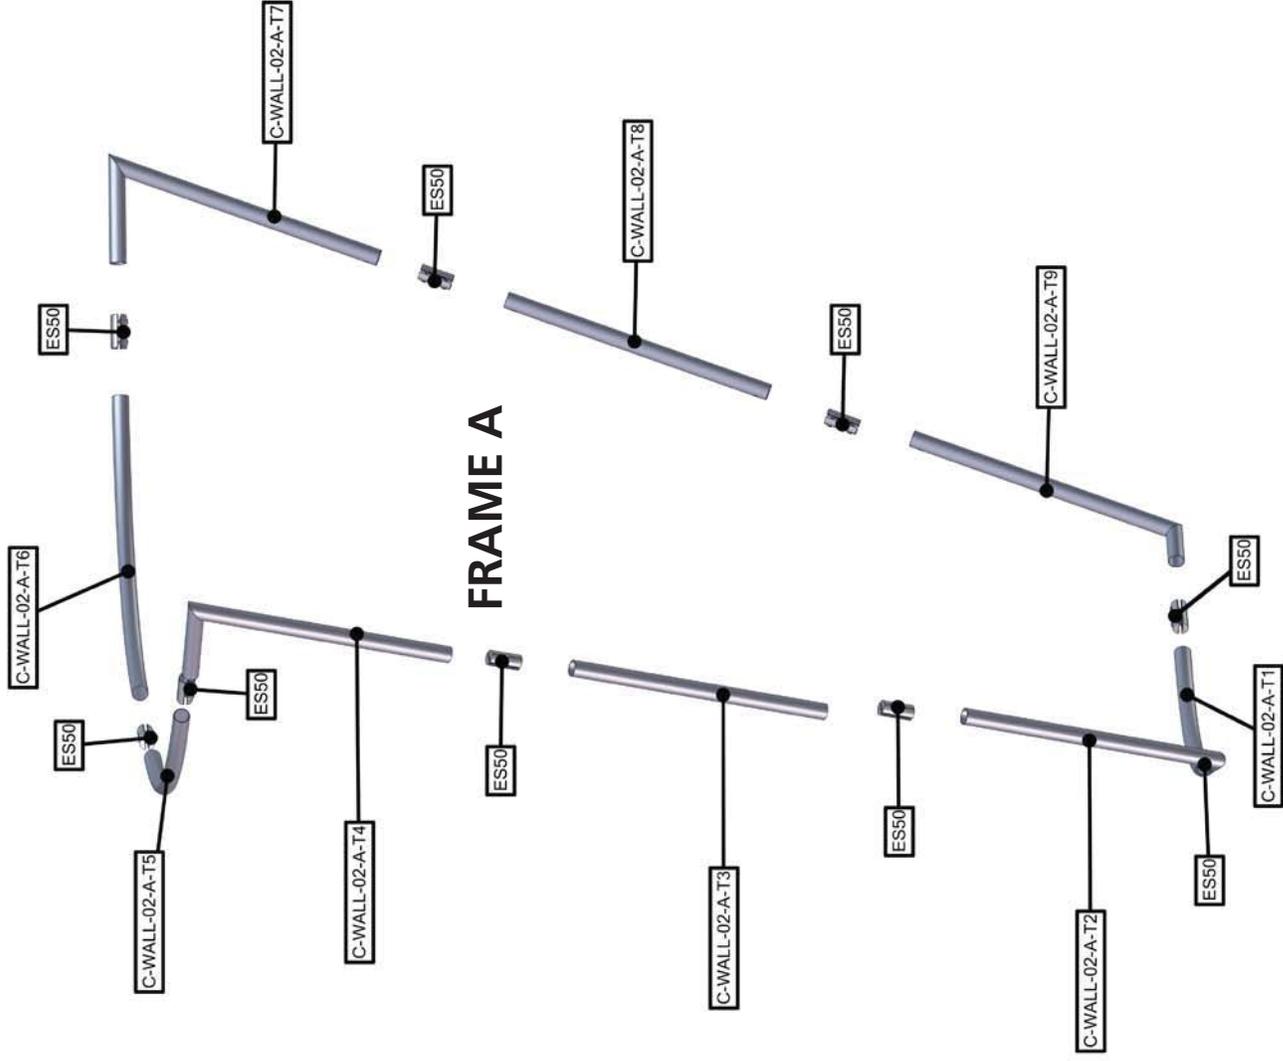


# Exploded View

C-WALL-02

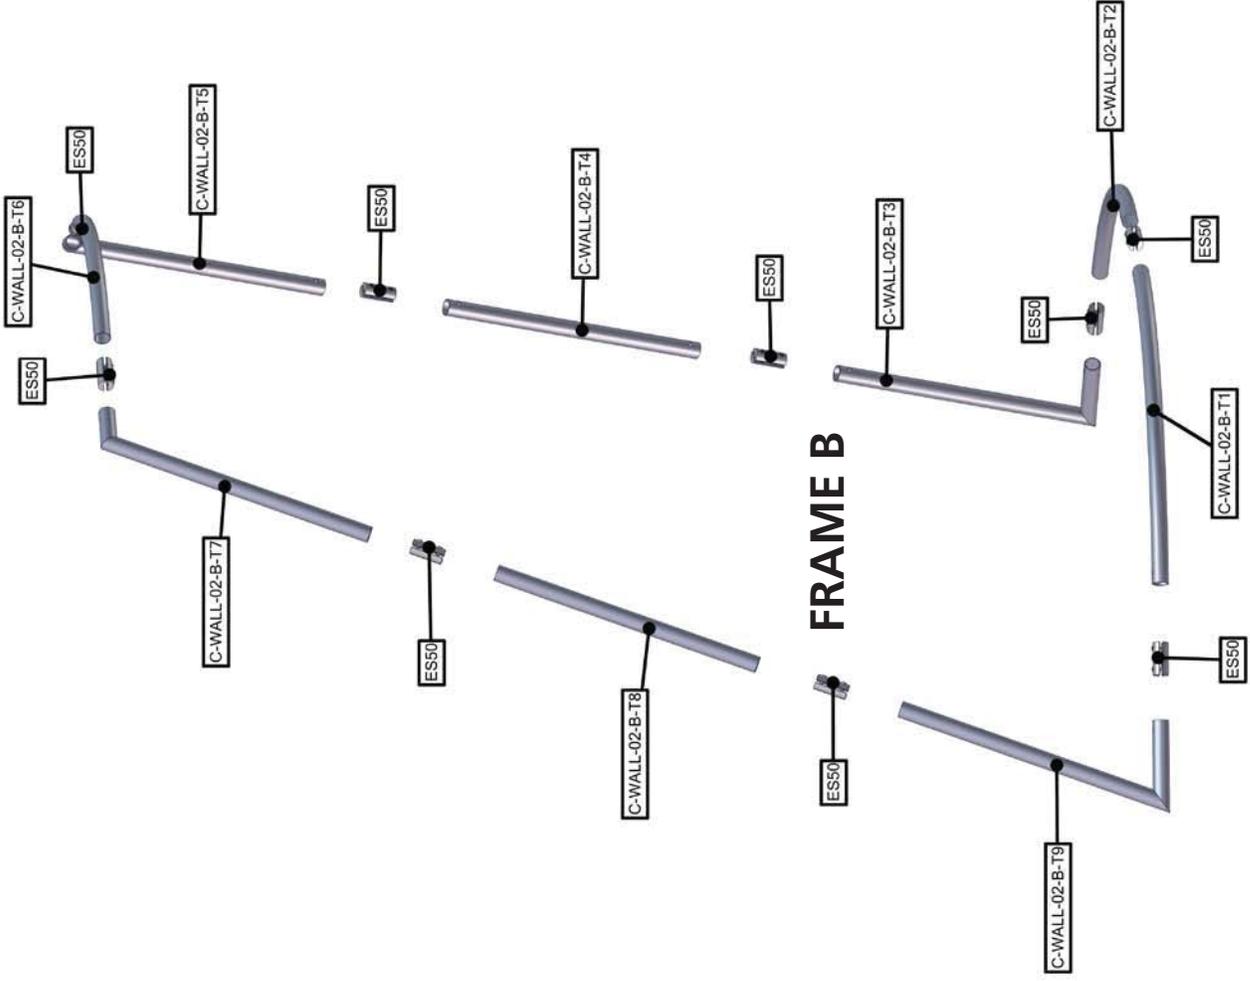


# Exploded View

C-WALL-02

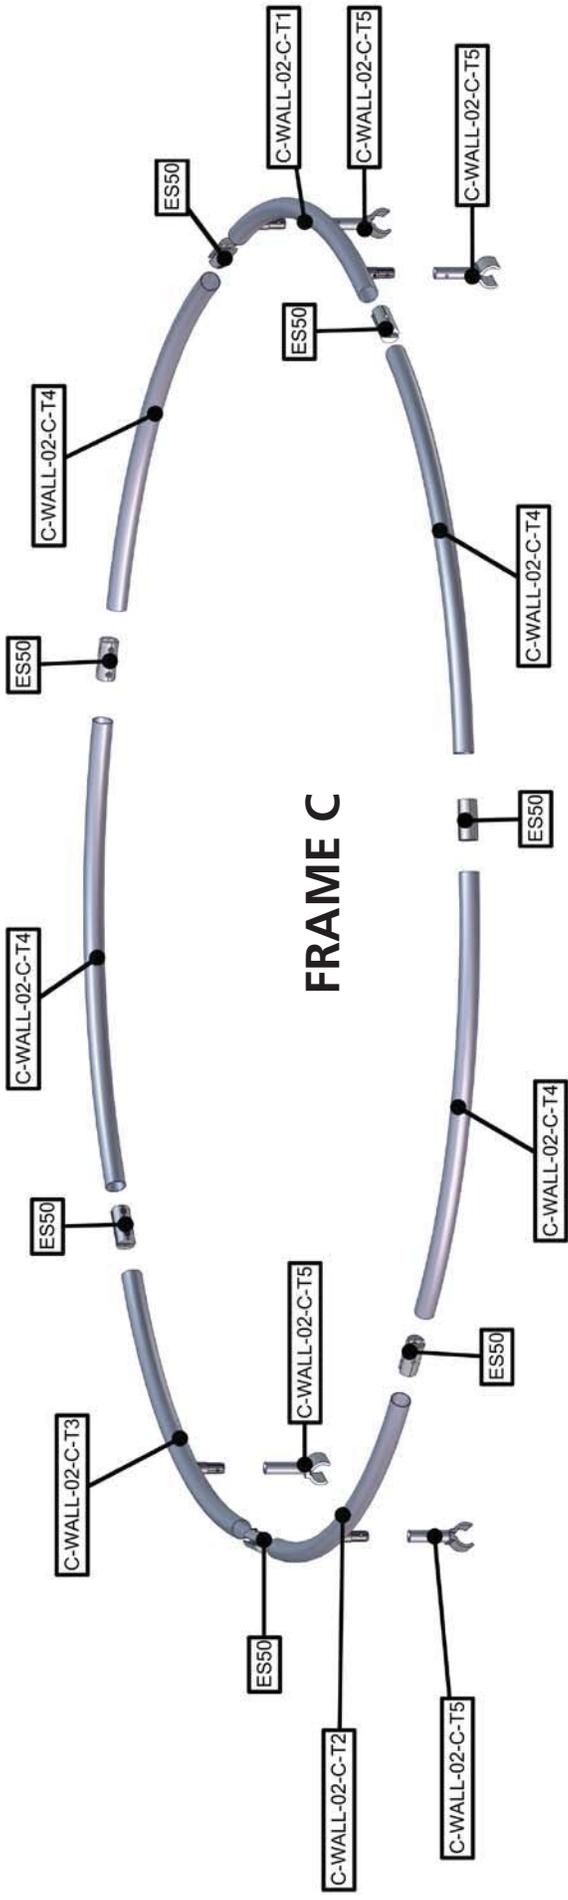


# Labeling Diagram

C-WALL-02

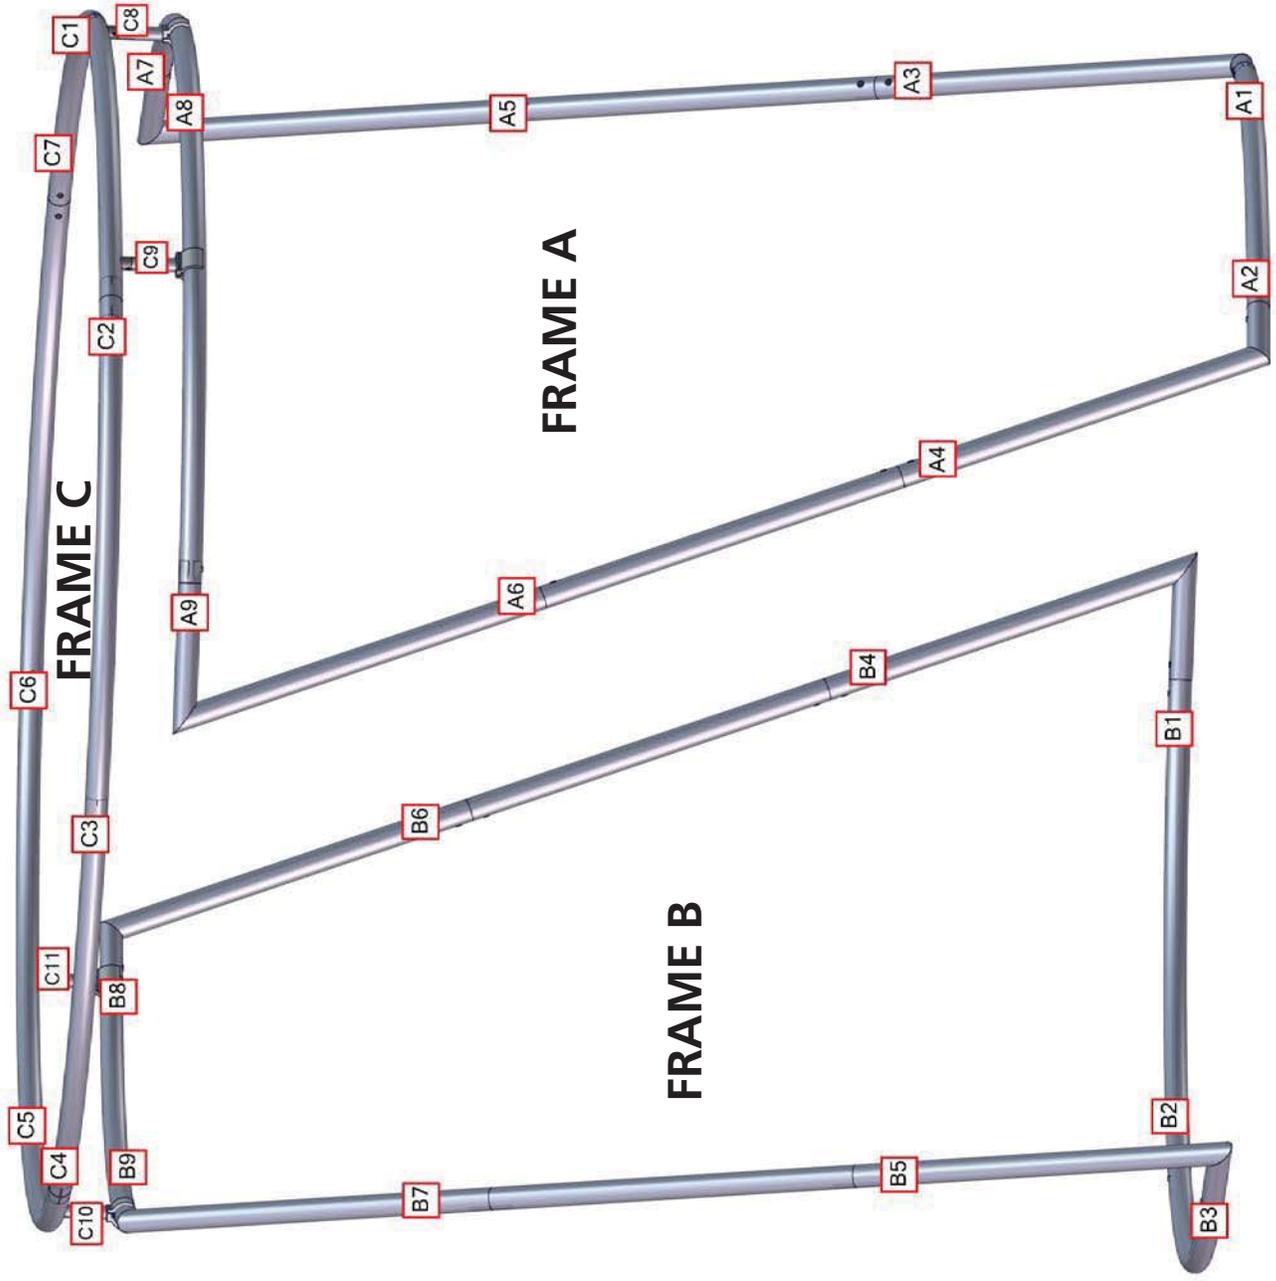


OVERVIEW

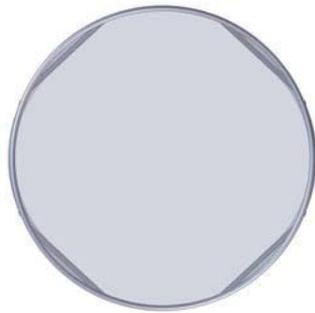


# Connection Methods

Formulate® structures use a number of different yet simple connection methods. Your kit will include one or more of the connection methods shown below. Steps within the Kit Assembly will reference a specific method for each connection point.


## Connection Method 1: ES30 / ES50 / ES75

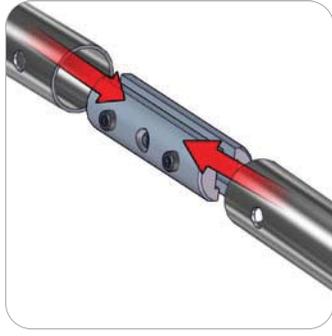

Compress the unlocked connector and slide one tube onto each end. Lock both screws carefully using your allen key tool. Be sure to lock securely, but do not overtighten.

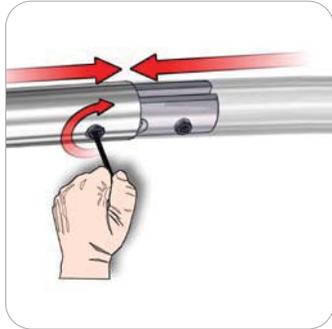

## Connection Method 2: Snap Buttons & Swage

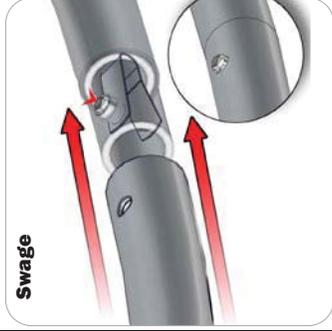


Swage




Snap Buttons

Locate the snap button on the connector or swage tube. Locate the hole on the corresponding tube. Press the snap button with your thumb and slide the tube and connector together so that the snap button snaps fully into the lock hole. To disassemble, press the snap button and pull apart.

## Connection Method 3: ES30-90B / ES30-1 / ES30-C

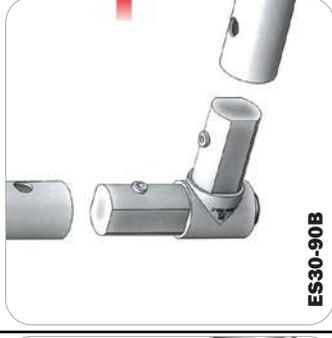


ES30-90B

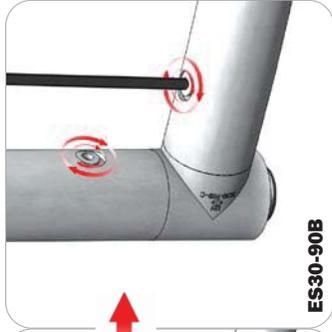


ES30-90B

Compress one unlocked end of the connector and slide it through one tube end. Compress the other end of the connector and slide the second tube on. Lock both screws carefully using your allen key tool. Be sure to lock securely, but do not overtighten.


## Connection Method 4: Tube Clamps

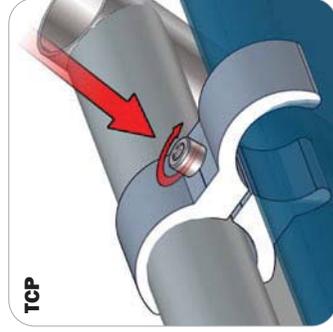

TCP

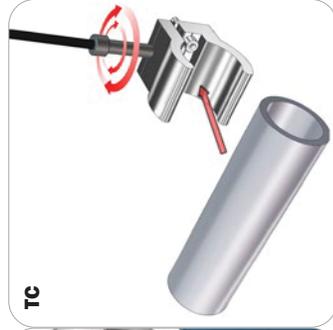

TC

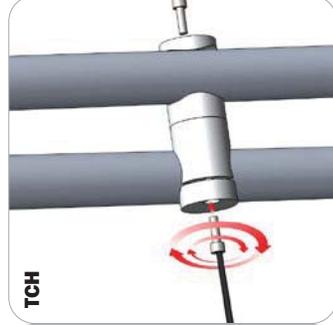

TCH

Be sure to fully assemble all frames before using clamps. With the clamp unlocked, place one tube of the first frame into the mouth of the clamp. Place the second tube (if applicable) into the second mouth of the clamp. With both frame's tubes in the clamp, be sure to lock securely, but do not overtighten.



# Kit Assembly

## Step by Step

### Step 1.


Locate the components necessary for assembling Frame A. Assemble the frame in order according to the Labeling Diagram.

Please reference Connection Method 1 for more details.

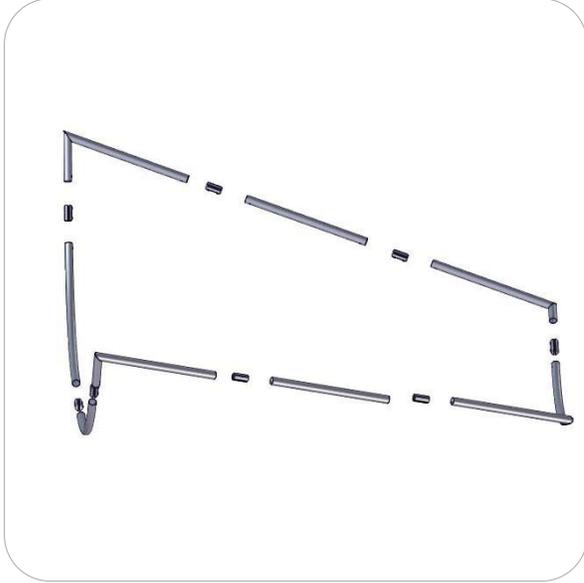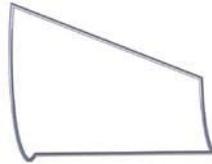

### Step 2.

Apply graphic to Frame A. For ease of installation, pull the fabric cover from the bottom to the top of the frame while the frame rests flat on the floor. Zip to enclose.

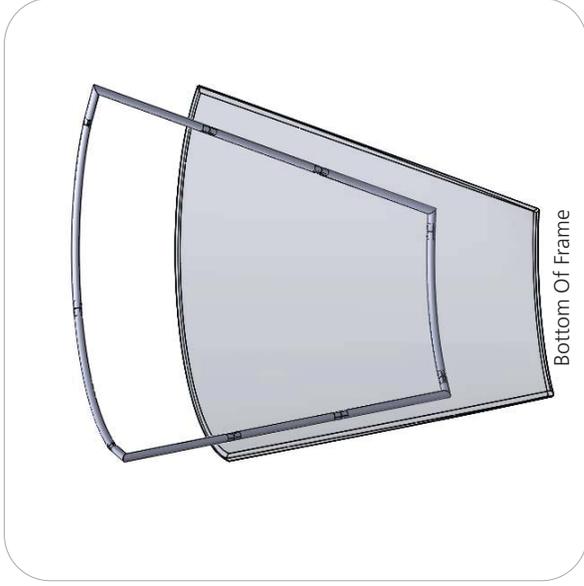

### Step 3.


Locate the components necessary for assembling Frame B. Assemble the frame in order according to the Labeling Diagram.

Please reference Connection Method 1 for more details.



### Step 4.

Apply graphic to Frame B. For ease of installation, pull the fabric cover from the top to the bottom of the frame while the frame rests flat on the floor. Zip to enclose.

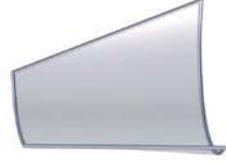

# Kit Assembly

## Step by Step

### Step 5.

Locate the components necessary for assembling Frame C. Assemble the frame in order according to the Labeling Diagram. Do not connect C-WALL-02-C-T5 clamp tube assemblies, we will connect these in a later step.

Please reference Connection Method 1 for more details.



### Step 6.

Apply graphic to Frame C. Pull the fabric cover over frame while the frame rests flat on the floor. Zip to enclose.



### Step 7.

Add your C-WALL-02-C-T5 clamp-tube assemblies to your frame.

Refer to Connection Method 2 for more information.



### Step 8.

Clamp your frames together using the C-WALL-02-C-T5 clamps.

Refer to Connection Method 4 for more information.

Assembly complete.

