

Interlocking Tiles Installation Instructions

INSTALL INSTRUCTIONS

Congratulations on purchasing or renting "The World's Finest Modular Flooring". For quality assurance, please read through the installation instructions in its entirety before you begin.

Step 1: (Optional) PREPARATION

- Clear the flooring surface of any removable objects and or items.
- Sweep or vacuum any excess dirt and debris off of the flooring surface.

Step 2: STARTING POINT


- In your garage stand facing your garage door opening.
- Locate the top-left corner of your garage.



*NOTE: A minimum expansion gap of 1/4" for 15.75" tiles and 1/2" for all other styles should be left at the walls and/or any other immovable objects such as cabinets, vehicle lifts, support beams, etc.


Step 3: INSTALLING TILE #1

- Place Tile #1 (Tile A) in the top left corner with the pegged "male" sides facing the left wall and garage walls.
- Remember to leave a 1/4" expansion gap between the tile and wall.

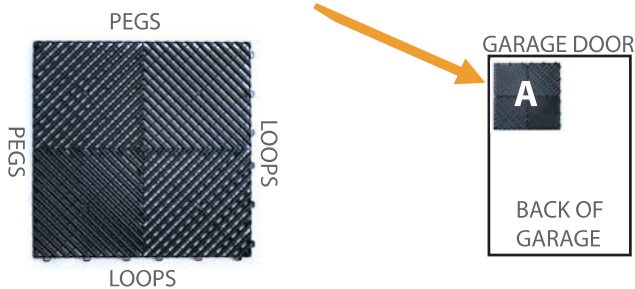

Step 4: INSTALLING THE NEXT TILE

- Work left to right, interlock Tile B with Tile A making sure that loops and pegs are facing the same direction

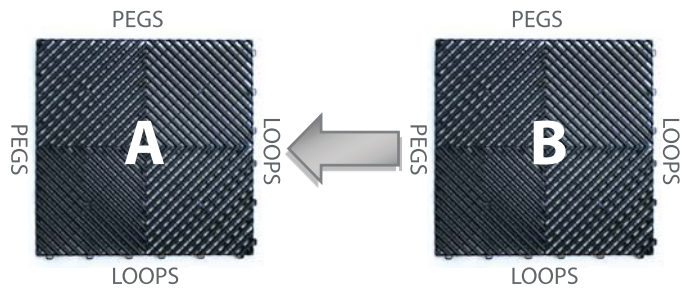

Step 5: COMPLETE ROW #1

- Continue with your first row until the right wall is reached.

*NOTE: If cutting is necessary, refer to the "Cutting Recommendations" portion of the Install Instructions.

Step 6: INSTALLING ADDITIONAL ROWS

- Return to the left wall and repeat steps 4-5 until the first three rows are completed.

Step 7: INSTALLING EDGES

- Following completion of the first three rows, connect the edges to the first installed row nearest to the garage door entry.
- Edges are only needed between the garage door rails. Refer to the "Edge Installation" portion of Install Instructions (PG.2).

*NOTE: Edges may have to be cut to fit within garage door rails.

Interlocking Tiles Installation Instructions

Step 8: POSITIONING YOUR EDGES

- ▶ This step begins by closing your garage door.
- ▶ Gently push the first 3 rows of tile with attached edges up against garage door for a precise fit.

Step 9: FINISHING YOUR INSTALL

- ▶ Resume steps 4-5 until the back wall is reached.
- ▶ Be sure to check the alignment of your floor as you progress.
- ▶ Cutting may be necessary along the back wall to complete install!

CUTTING RECOMMENDATIONS:



- ▶ All Interlocking Tiles can be cut with an electrical saw such as a circular saw, jig saw, table saw, etc.
- ▶ A fine toothed blade is recommended.

*NOTE: When making your cuts, be sure to position your tile accordingly to ensure it interlocks with the rest of your flooring. Refer to the tool manufacturer's safety guidelines.

*WARNING: **Do not walk on tiles that are not interlocked together** as they can be a dangerous slipping hazard. When installing your floor, be cautious of Swisstrax tiles placed on top of one another.

INSTALLING GRAPHIC INTERLOCKING TILES

- ▶ When adhering custom Graphic Tiles, install tiles as directed without vinyl graphic. Peel off back sheet of vinyl graphic and carefully insert into the Graphic Tile tray.

EDGE INSTALLATION

- ▶ In your delivery, you received either looped "female" edges or pegged "male" edges.




Female/Looped

Male/Pegged

Option #1: Female Edge + Tile

- ▶ Lift up tile and align the female/looped edge with the male/pegs of the tile, and snap into place.

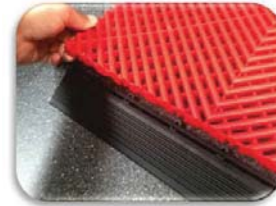

Option #2: Male Edge + Tile

- ▶ Hover above and align the edge male/pegs with the female/looped of the tile, and snap into place.



ATTACHING THE EDGE

- ▶ With pegs and loops aligned, begin by pressing the sides of the tile into the edge, working your way to the center. This may take a little pressure and you will feel a "snap" when the tile is attached to the edge.