


PRESTO SETUP INSTRUCTIONS



REMOVE PRESTO FROM BAG AND PLACE ON FLOOR WITH THE CORD ON THE BOTTOM OR THE LAMINATE ON TOP



LIFT UP AND ROTATE LEFT

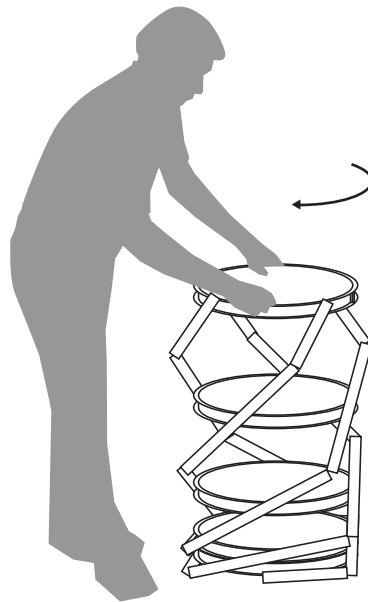

PLACE FOOT ON BOTTOM SHELF AND CONTINUE ROTATING LEFT UNTIL PRESTO SNAPS INTO PLACE


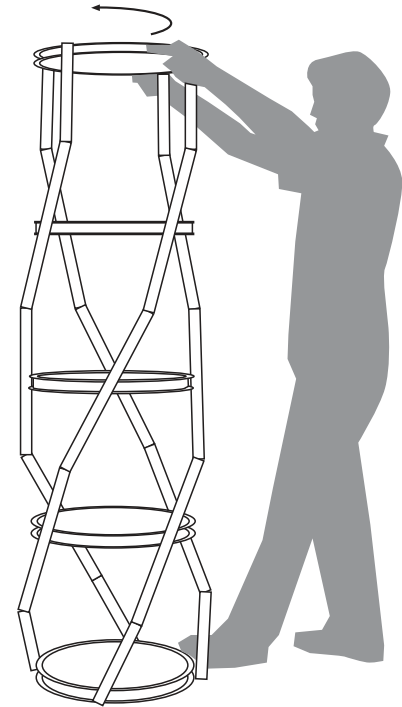


TABLE AND KIOSK SET UP WITHOUT PANELS



PT40
Also available in
WS40, CT40, & DL40

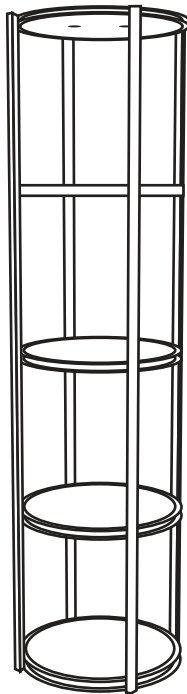

PK80

PLACE NOTCHED CLEAR OR OPAQUE GRAPHIC PANEL WITH THE NOTCH BETWEEN THE LEG AND SHELF



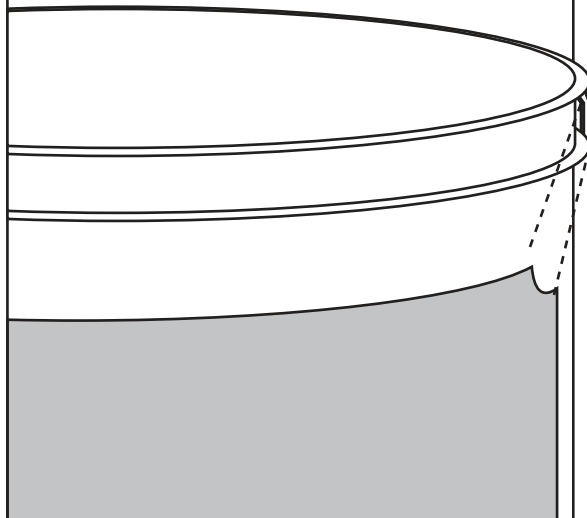


TABLE AND KIOSK SET UP WITH PANELS

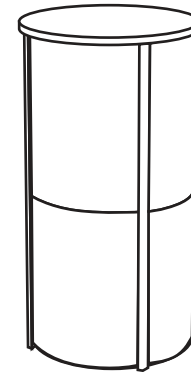

PT40
Also available in
WS40, CT40, & DL40

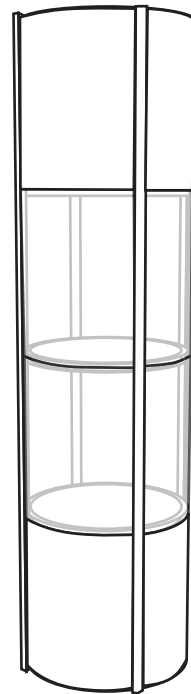

PK80